

4315 Old William Penn Highway, Monroeville, Pennsylvania 15146


p 412.856.8368 f 412.856.8969 partysevvy.com



flawless event rentals™

Frozen Drink Machine, Two Bowl

Operating Instructions

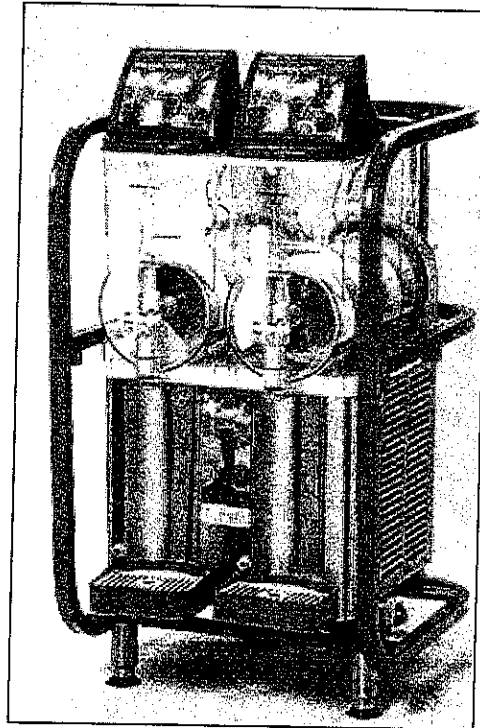

CONTROLS

On the right side of the machine are the following switches and controls. (Figure 1)

Main Power ⚡

“O” Position: Off position, Power is turned off to all functions.

“I” Position: On position, Machine has power.

Display Light 💡

“O” Position: Lights are off.

“I” Position: Lights are on. Display lights have power.

Agitator Switch ↻

“O” Position: Agitator is off.

“I” Position: Agitator is on.

Cooler Switch * / ❄️

“O” Position: Off Position.

“I” Position: Cool drink mode. ❄️

“II” Position: Frozen mode. * ❄️

Compressor green light 🟢

If the compressor green light is on, the compressor should be working.

Automatic defrost / standby timer (Figure 2)

This timer will automatically switch your dispenser from the frozen drink to the chilled drink mode. This timer can be programmed to switch the machine at any time of the day or night. The standard settings are:
 Switch to chilled from frozen—11:00PM
 Switch to frozen from chilled—9:00AM
 For all seven days of the week. Find detailed programming instructions on page 12.

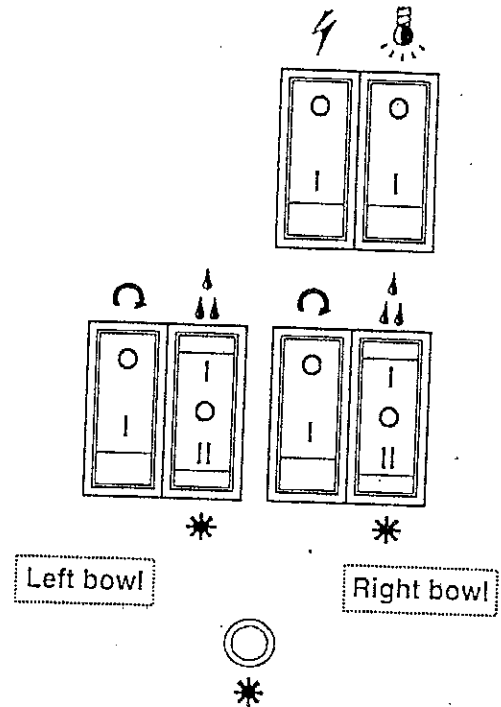


Figure 1

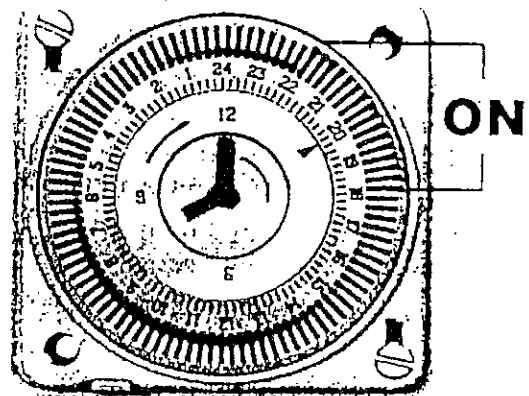


Figure 2

HOW TO OPERATE

(cont'd)

4) To operate, press main power switch and agitator switch to ON position (Figure 12). **NOTE: The agitator switch must be to ON position before setting to liquid or slush mode.**

4.1. For slush, press the cooler switch to bottom position. (II /).


4.2 For liquid, press the cooler switch to up position (I /). If the machine is being used as a liquid cooler, it is provided with an inside thermostat for controlling the liquid temperature.

Note that the machine is equipped with a time delay relay that provides for a four minute delay from the time of the initial start. This is to prevent the compressor from short cycling. Once the compressor is ON, the green light will be on.

Note: The cooler switch is a three position Switch and in order to have the compressor Off, all the cooler switches need to be in the Middle position.

5) To illuminate the mix tank cover display On top of the unit and the product in the Bowl press the display light switch to down Position. (I /).

CAUTION: IF THE MACHINE IS STOPPED AT NIGHT WITH ICE IN THE TANK, REMOVE ALL ICE SLABS BEFORE STARTING.

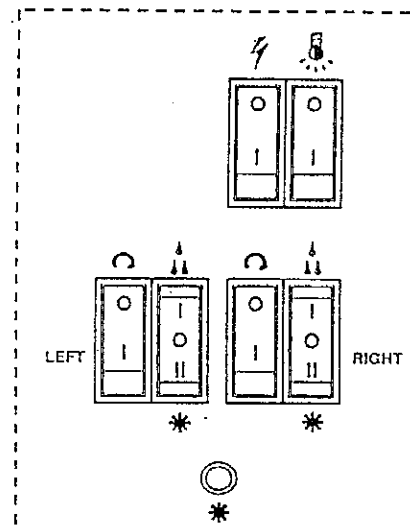

2 bowls