


QUICK-START GUIDE

“COLD-TEMP” FOOD SENTRY SYSTEM

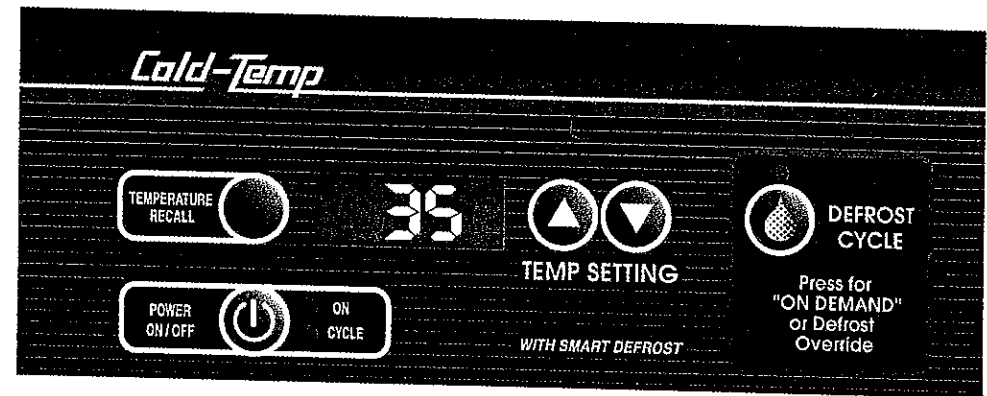

POWER ON / OFF - Turns cabinet ON and OFF.

Also Changes Display to °Celsius or °Fahrenheit Scale: You may change the Digital thermometer scale to either °C or °F as follows: While unit is OFF, press and hold the “ON/OFF” key for five (5) seconds. The display will then switch from “dgF” to “dgC”. Repeat to change scale again.



ON

Power Indicator Light - Indicates that the power is on.



Temp Display - Digital temperature display shows the temperature of the cabinet.

“dgF” = Degrees Fahrenheit


“dgC” = Degrees Celsius

You may change the Digital thermometer scale to either °C or °F as follows: While unit is OFF, press and hold the “ON/OFF” key for five (5) seconds. The display will then switch from “dgF” to “dgC”. Repeat to change scale again.




CYCLE

Cycling Indicator Light - When light is “ON”, this indicates that the cabinet is cooling down to desired temperature. When cooling elements are activated, light will come “ON” until cabinet has reached desired temperature, and go “OFF” when unit has reached desired temperature.

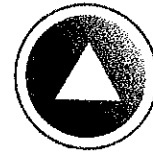

TEMP SETTING - Raising the Temperature
Press to raise the temperature of the cabinet.

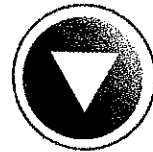


TEMP SETTING - Lowering the Temperature
Press to lower the temperature of the cabinet.



TEMPERATURE RECALL
Press to display either “Actual Internal Cabinet” actual temperature, or desired “Set Point” temperature.

Actual: The factory default setting shows the actual internal cabinet temperature and acts as a digital thermometer. A momentary touch of the “Temp Recall” key will recall the original dial setting. The display will then automatically return to the actual internal temperature.

Set Point: To have temperature read-out display the “Set Point” temperature, press and hold the “Temp” key for five (5) seconds. The fourth (4th) digit on the display will flash either “S” (Set), or “A” (Actual) to indicate which mode is active. To switch back again, repeat this step holding the “Recall Temp Set” key for five (5) seconds.

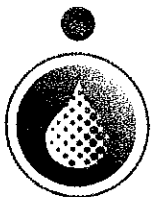

Activated red light indicates DEFROST is in progress.

DEFROST CYCLE - “ON DEMAND” DEFROST
Press to ACTIVATE DEFROST at any time.
Press to CANCEL DEFROST in progress (Defrost Override).